



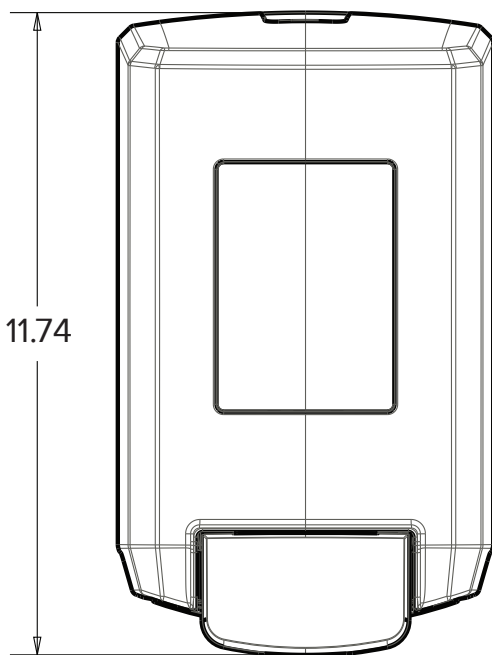


PURELL® CS4 ALL-WEATHER DISPENSER DIMENSIONS AND INSTALLATION INSTRUCTIONS


DIMENSIONS IN INCHES

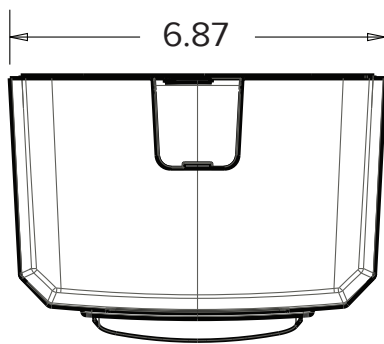

FRONT

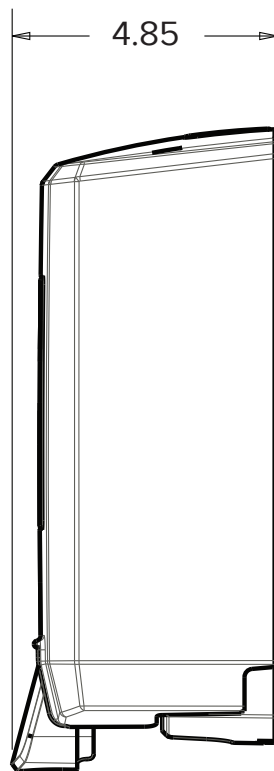


SIDE

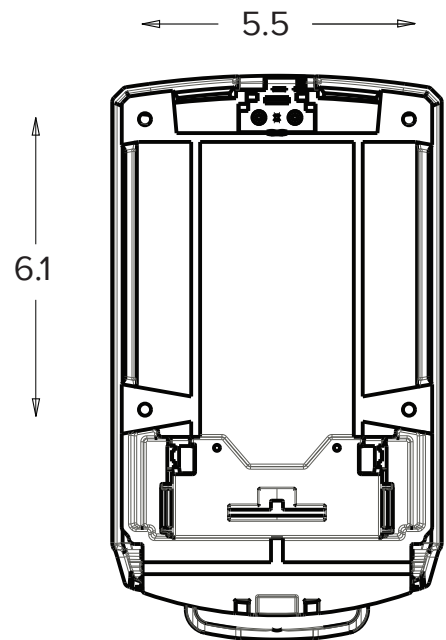


**BACK HOLE
PATTERN**

INSTALLATION

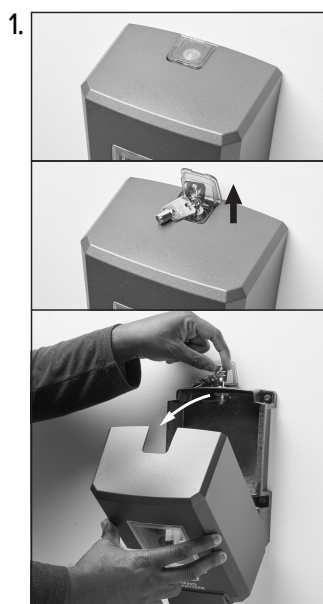

Using the security key (included), open the dispenser by lifting the top lock cover.

2. IF INSTALLING WITH WALL FASTENERS:

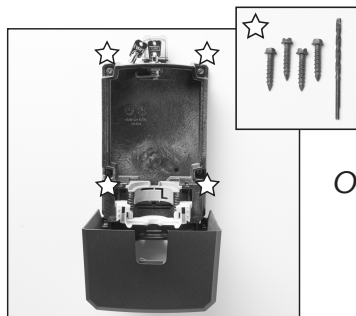

Use the dispenser as a template to drill four holes with a 3/16" drill bit (if mounting into concrete, use a 3/16 concrete drill bit). Please use all four screws to mount the dispenser. See photo for hole template. Continue to step 3.

IF INSTALLING WITH TAPE:




Clean the installation surface with an alcohol pad. Allow the surface to dry for one minute. Peel the paper installation tape and press the dispenser firmly against the wall for 10 seconds. Wait 24 hours before loading the refill into the dispenser. Continue to step 3.

IF INSTALLING WITH POLE BRACKET:
POLE MUST BE 12" DIAMETER
FOR PART NUMBER - 5500-01-BRKT




See steps a-e below.


CONTINUED POLE BRACKET INSTRUCTIONS

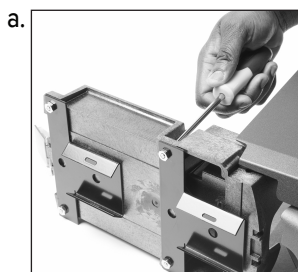


Attach the two pole brackets using the corresponding dispenser holes with the screw and nut provided.

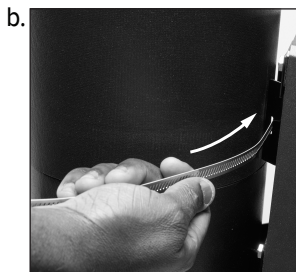


Snake the steel straps around the pole and back through the screw clamp as much as possible.

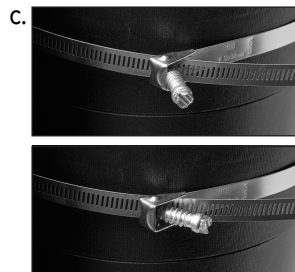

Flip down the screw clamp.

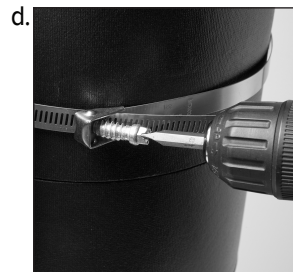


Tighten with a power drill or flat-head screwdriver.

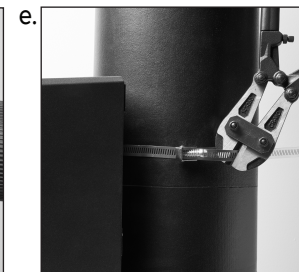


Cut the excess straps or tuck them away.


⚠ WARNING: PROTECT YOUR HANDS DURING THE TIGHTENING PROCESS.

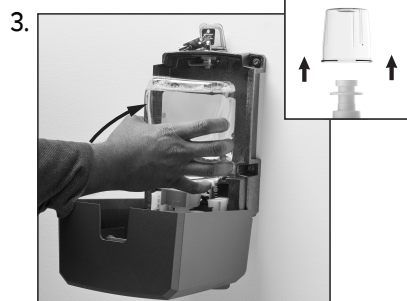

Remove the refill cap and push the refill into the dispenser.

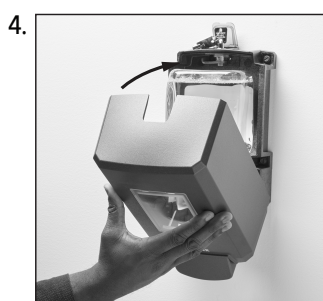

Close the dispenser cover.

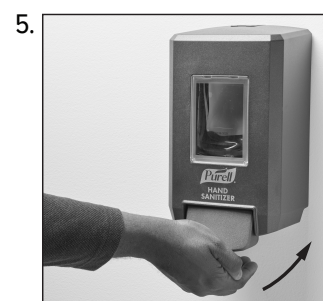

Place hand in the middle of the push bar and push multiple times to prime the refill. Product will dispense as the bar is depressed.