



PURELL® ES10 Dispensing System Maintenance Guide

Our Simplest, Most Sustainable Touch-Free Dispensing System

- Never change batteries* — fresh battery in every refill
- Check multiple dispensers with just a glance
- Effortless refills are easy to match and refresh the look of the dispenser
- Distinct PURELL® brand design: engineered to fit everywhere
- Easy to recycle: quickly pull apart collar and battery
- SANITARY SEALED™ refills help reduce potential for contamination
- Meets ADA Requirements for depth



REFILL CARTRIDGE LOADING



Open dispenser by pressing release buttons on either side of dispenser and sliding front cover down.



Insert refill. You will hear an audible "click."




Close dispenser cover. The LED light will indicate the refill is accepted. After 7 seconds, single green light will indicate the dispenser is ready to activate.

REFILL CARTRIDGE REMOVAL




Open dispenser by pressing release buttons on either side of dispenser and sliding front cover down.

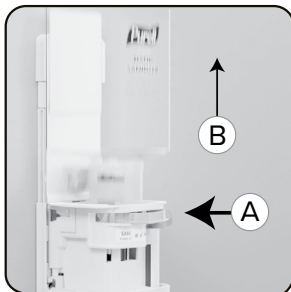


(A) Press green release latch to remove the refill (B) by pulling it up.


DISPOSAL/RECYCLING

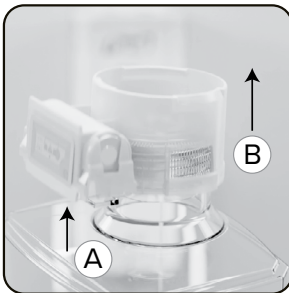

(A) Grab refill collar from below battery. (B) Pull straight upward to remove. Dispose/recycle PET bottle.

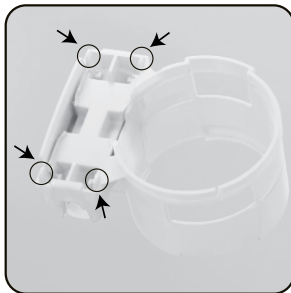



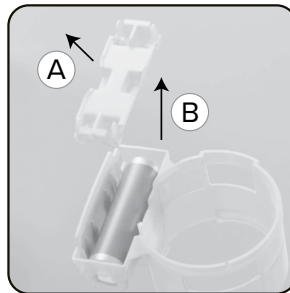



Remove the battery cover by depressing the tabs. Note: at least one tab needs to be depressed to remove the battery cover (circled above).



(A) Pull out battery cover, then (B) remove AA battery and dispose in accordance with federal, state, and local regulations.

For questions, please reach out to
Customer Service at 1-800-321-9647

DISPENSER STATUS LED

-  **Green flash** – every 7 seconds
= System is fully operational
-  **Red double flash** – every 4 seconds
= out of service (invalid refill)
-  **No flash** while cabinet is closed
= no refill
-  **Yellow flash** while cabinet is open
= low auxiliary battery
-  **Yellow flash** while cabinet is closed
= dead auxiliary battery
-  **Red / Green** alternating flashes
= system fault (replace dispenser)

CARE & CLEANING INSTRUCTIONS

- 1** Always remove the refill before cleaning to avoid accidental actuation.
- 2** Routinely wipe dispensers with a soft, moist cloth.
- 3** Pay special attention to cleaning under the dispenser or push bar, as product may build up in this area.
- 4** Do not use abrasive cleaners or chemical solvents** to clean. Use of hospital-approved disinfectant and other typical cleaning solutions is acceptable.

**Abrasive cleaners will scratch the plastic and labeling. Strong chemical solvents can dull the plastic.

*Under normal usage conditions.
©2024 GOJO Industries, Inc. All rights reserved. | #36328 (3/2024)

WBENC-CERTIFIED
WOMEN'S BUSINESS
ENTERPRISE

certified
WBENC
WOMEN'S BUSINESS ENTERPRISE

To learn more, visit
www.PURELLSOLUTION.com



GOJO, MAKERS OF PURELL™